<u>Cette procédure est dédiée à la mise à jour du firmware de votre</u> <u>télécommande, ainsi que de votre collier Canicom GPS pour les utilisateurs</u> équipés du câble de programmation spécial

1. Installations préalables

Si cela n'a jamais été fait préalablement, il faut télécharger « Flash Tool + Driver.zip » : il s'agit du logiciel permettant de faire les mises à jour (FlashTool_v5.1624.00), et de son driver (MTK_USB_COM_Driver_SDK_v1.12.50.0) pour que ce dernier puisse fonctionner correctement.

Si cela a déjà été fait dans le passé, merci de passer directement à l'étape 2.

Une fois téléchargé, il faut extraire ce fichier ZIP en procédant de la façon suivante :

- Ouvrir le dossier « Téléchargements »,
- Identifier le fichier « Flash Tool + Driver.zip »,
- Effectuer l'action suivante : clique droit « extraire ».

Il faut maintenant installer le driver en entrant dans le nouveau dossier « Flash Tool + Driver » fraichement extrait, puis dans le sous-dossier « MTK_USB_COM_Driver_SDK_v1.12.50.0 », et enfin en double cliquant sur l'icône « InstallDriver.exe » sélectionnée ci-dessous. Encore une fois, cette installation est unique et ne devra pas être répétée les prochaines fois.

Téléc	hargements >			
^	Name ^	Date modified	Туре	Size
	🗹 📙 Flash Tool + Driver	01/07/2021 17:31	File folder	
	🕎 Flash Tool + Driver.zip	29/06/2021 10:10	Archive WinRAR ZIP	16,102 KB

Téléchargements > Flash Tool + Driver >

^	Name ^	Date modified	Туре	Size	
	FlashTool_v5.1624.00	01/07/2021 17:31	File folder		
	MTK_USB_COM_Driver_SDK_v1.12.50.0	01/07/2021 17:31	File folder		

Téléchargements > Flash Tool + Driver > MTK_USB_COM_Driver_SDK_v1.12.50.0 >

Name	Date modified	Туре	Size
📜 dev_inst	01/07/2021 17:31	File folder	
dev_remove	01/07/2021 17:31	File folder	
📜 etw_log	01/07/2021 17:31	File folder	
<pre>mtk_com</pre>	01/07/2021 17:31	File folder	
nsis_utils	01/07/2021 17:31	File folder	
InstallDriver.exe	13/12/2012 02:12	Application	3,531 KB
release_note.txt	13/12/2012 02:48	Text Document	16 KB

🔀 MediaTek COM_Driver 1.12.50.0 Setup: Installat 🛛 🛛 🗙	🕼 MediaTek COM_Driver 1.12.50.0 Setup: Installat – 🛛 🛛 🗙				
Check the components you want to install and uncheck the components you don't want to install. Click Next to continue.	Setup will install MediaTek COM_Driver 1.12.50.0 in the following folder. To install in a different folder, dick Browse and select another folder. Click Install to start the installation.				
Select components to install: MediaTek COM Driver	Destination Folder C:\Program Files (x86)\MediaTek\MediaTek COM_Driver Browse				
Space required: 3.6MB	Space required: 3.6MB Space available: 384.3GB				
Cancel Nullsoft Install System v2,46 Next >	Cancel Nullsoft Install System v2.46				

Cliquez sur « Next » puis sur « Install » pour poursuivre l'installation, jusqu'à ce que la barre de progression ci-dessous se remplisse complètement. Cela signifie que l'installation du driver est terminée et réussie.

B MediaTek COM_Driver 1.12.50.0 Setup: Compl	—	\times
Completed		
Show <u>d</u> etails		
Cancel Nullsoft Install System v2,46 <	: <u>B</u> ack	se

2. Vérifications de la version

Il s'agit maintenant de vérifier si la dernière version du firmware a déjà été téléchargée sur votre ordinateur : pour cela, comparez-la avec celle(s) présente(s) dans le dossier « Téléchargements » sur le Bureau de l'ordinateur qui contient par défaut toutes les versions déjà téléchargées. Pour rappel, cette dernière se situe sur le site web NUM'AXES dans l'onglet « mises à jour » de la <u>page Canicom</u> <u>GPS</u>.

Pour rappel, ne pas oublier d'extraire le fichier ZIP du nouveau firmware fraichement téléchargé en procédant de la sorte :

- Ouvrir le dossier « Téléchargements »,
- Identifier le fichier ZIP contenant le nouveau firmware,
- Effectuer l'action suivante : clique droit « extraire ».

Les archives ZIP et anciens firmwares disponibles dans ce dossier peuvent être ignorés ou supprimés.

3. Pré-chargement du nouveau firmware

Pour lancer l'outil permettant de faire la mise à jour, double-cliquez sur l'icône « Flash_tool.exe » se situant généralement dans l'arborescence ci-dessous :

Téléchargements	>	Flash Tool + Driver	>	FlashTool v5.1624.00	>
				_	

Name	Date modified	Туре	Size
doc	01/07/2021 17:31	File folder	
BACKUP.INI	18/02/2017 14:43	Configuration settings	1 KB
stom.dll	18/02/2017 14:43	Application extension	3,832 KB
🕠 brom.ini	18/02/2017 14:43	Configuration settings	1 KB
ConsoleMode_v1_0.xsd	18/02/2017 14:43	XSD File	12 KB
ConsoleMode_v2_0.xsd	18/02/2017 14:43	XSD File	7 KB
ConsoleMode_v3_0.xsd	18/02/2017 14:43	XSD File	7 KB
ConsoleMode_v3_1.xsd	18/02/2017 14:43	XSD File	8 KB
ConsoleMode_v3_2.xsd	18/02/2017 14:43	XSD File	9 KB
ConsoleMode_v3_3.xsd	18/02/2017 14:43	XSD File	7 KB
ConsoleMode_v3_4.xsd	18/02/2017 14:43	XSD File	9 KB
ConsoleMode_v4_0.xsd	18/02/2017 14:43	XSD File	20 KB
ConsoleMode_v5_0.xsd	18/02/2017 14:43	XSD File	21 KB
DataLibrary.dll	18/02/2017 14:43	Application extension	560 KB
DualTalkSwitchTool.exe	18/02/2017 14:43	Application	484 KB
FilterBinTrans.dll	18/02/2017 14:43	Application extension	9 KB
Flash_tool.exe	18/02/2017 14:43	Application	3,241 KB
🛐 Flash_tool.INI	01/07/2021 11:05	Configuration settings	8 KB
FlashToolLib.dll	18/02/2017 14:43	Application extension	1,179 KB
FrameCommModule.dll	18/02/2017 14:43	Application extension	64 KB

Pour information, si l'icône est grise au lieu de la flèche rouge ci-dessus, cela signifie que l'archive ZIP dans laquelle se situe ce dossier n'a pas été extraite.

Une fois la page ouverte, cliquez sur « Scatter/Config File » en haut à gauche de la fenêtre.

<u>a</u>		16/01	111
Corbeille	K2 FlashTool	- 🗆 X	
	File Actions Options Window Help		
$\mathbf{\Omega}$	Download Read Dack Memory Test		
ें 🚅 Flash_tool -	Download Agent Scatter/Config File Auth File Cert File RootCert File Format Download	Ø Stop	
Raccourci	Download Agent D:\Users\V50w/M Open a scatter file ts\FlashTool_v5.1624.00\MTK_AllnOne_DA.bin	Doothaitler	
	Scatter File D	Download	
	Authentication File	BoatROM	
féléchargements	Certificate File	LICE	
- Marcouler	RoolCert File	* Downoan	
	¢	>	
	Parenetes Information D TP adda(0x000000000000000000000000000000000		
	0%	1111	
	NOR Searching 921600 bps		
		li	
P Taper ici pour rechercher	o # Q 🖬 🖥 😭 🕫	~ ⊕ ⊜ (■ /派 句》) FRA 11:42 11/02/2021 号

Précisez le chemin d'accès dans lequel se situe le nouveau firmware sur votre ordinateur (par défaut dans le dossier « Téléchargements » de l'ordinateur).

		
Corbeille	FlashTool	- 🗆 X
Ω	Pile Actions Optimized Download NeedDack 12 Open Scatter File	×
Sissing tool -	Download Agent Scath	₩ EF - Ø Stop
Raccourci	Download Agent XU X OneDrive 2000 VS0WM	Bootballer From Topal
	Authentication File Ge PC Ribliothi	Hues BonROM
- Raccourci	RoolCett File Réseau	gements - Raccourci
MAY	Name Bibliothiques 780 octe Ce FC Ce FC Réseau Réseau Paameters Types de fichiers : Scatter/Config File ("tot, "cfg) O TP Types de fichiers : Scatter/Config File ("tot, "cfg)	Emplacement: Téléchargement; Ouvrir Arnuler
	0% NOR Searching 921600 bps	
P Taper ici pour rechercher	o # 😢 🖬 💼 😭 👔	ົ ତି ເ⊂ ແ ⊄4) FR∧ 11:43 11/02/2021

Si ce dossier contient plusieurs numéros de versions, ignorez les plus anciennes avant de poursuivre la sélection.

Corbeille	1 ElsebTool				
Corcelle Fish tool- Racoure Edequegenents	A FlashTool Hie Actions Option Download Read Dack Download Read Dack Download Agent Scatt Do	pen Scatter File ander dans :	▼ ← E ☆ Eマ Modifie le 10/02/2021 07:41 I Date de oréation: 10/02/2021 07:40 Taille: 37,0 Mc	X Stop Stop Doessi Introduction Stop S	
- RECOURS	RoolCert File Bible	Antriques	Dossiers : dog.text/52_20210115, dog.text/ Fichiers : Canicom GPS update history Image: state s	> <u>3.3.2</u> 2210115, invition	
t∎	0	0% NOR Searching 921600 bps	ß		Ê ■ x 40 FRA 11/43 11/02/2021 €

Pour initialiser le firmware de la télécommande, choisir le sous-dossier « handheld_test ».

Pour le collier, poursuivre avec « dog_testv5.2 » ou « dog_testv5.3 ».

Pour savoir quelle version choisir, branchez votre collier le temps du test :

- Version 5.2 : Les voyants lumineux mettent quelques secondes avant de s'allumer,
- Version 5.3 : Les voyants lumineux s'allument immédiatement.

<u>ATTENTION</u> : pour effectuer la mise à jour de vos colliers ceux-ci doivent impérativement être éteints.

				11	11/1
Corbeille	📢 FlashTool			- 🗆 🗙	
	File Actions Option	ala			
0	Download Nead Dack 12 Open Scatt	er File	>	<	
💍 🖻 Flash tool -	Download Agent Scatt	: 1.2d	⇔ 🖻 📸 🖬 -	Ø Stop	
Raccourci	Download Agent DNU: 📌	Nom	Modifie le lýp 10/02/2021 07/40 Doc	Bootbader	
	Scatter File Content Accès rapide	dog_testv5.3_20210115	10/02/2021 07:41 Dos	si USB	
	Authentication File	handheld_test-20210204	10/02/2021 07:41 Dos	Si BoelBBM	
Téléchargements	Certificate File Bureau			USB	
- Recourci	RoolCert File			Dowilloan	
MAJ	C C C C C C C C C C C C C C C C C C C	< Nom du fichier : Types de fichiers : Scatter/Config File (*bd, *cfg)	V V Annuler	,],	
	-	0%			
	NOR	Searching 921600 bps			
11 1 1 1 1 1				14	
P Taper ici pour rechercher	O Et	C 🗧 🗟 😭 🕖		^ @	È

Pour cet exemple, nous allons vous montrer la mise à jour de la télécommande. Pour le collier, la procédure est identique.

Finir la sélection avec le fichier dont le nom termine par « .cfg » qui contient le firmware et doit être ouvert.

Corbeille	File Actions Option	Open Scatte	r File				× 1	X		
Fish teal- Recours Téléhingenents - Recours	Download Agent Scath Download Agent Scath Download Agent 2:50 Scatter File 3 Authentication File Cethicate File RootCett File Name	P 2 Open Schut Tregender dans Accès rapide Buseu Bbilothèques Ce FC Qèseau	FIEL: Image:		Type Tailt Moc	← È È È E - Modifie le 10/02/2021 07:41 10/02/2021 07:41 10/02/2021 07:41 10/02/2021 07:41 10/02/2021 07:41 10/02/2021 07:41 te: fichier CTG :: 3,62 KG the le: 10/02/2021 07:41	Type Dossi Dossi Docu Fchii	Bootlander Bowland Bowland Bowland Bowland		
	< Parmeters OTP	NOR	Nom du tichier : Types de fichiers Searching	0//EDX810_EPS_11 :: Scatter/Config File (*) 0% 921600 bps	IC_BB		Innuler			

Le firmware est maintenant préchargé et prêt à être déployé.

4. Déploiement de la mise à jour

Dirigez-vous vers l'icône « Format », vérifier que « Format FAT » est bien sélectionné, puis validez sur « OK ».

¥3 FlashTool	Internet Window	Halo					-		
Download Download	Dack Memory Test	πειρ							
	Scatter/Config File	Auth File	Cert File	BootCert File	😨 Fornat	Ca Download	Ø		
DownloadAgert	D:\Users\V50WM\0	neDrive\Documents	\FlashTool_v5.1	624.00\NTK_AllnOne	_DA.bin		Roothaite		
Format Options							LICR	×	
C Reset	o Factory Default						0K		
Flas	Tool resets NVRA	M data items that from w05 52	t have NVRAM	CATEGORY_FACT	FORY attribute.		Cancel		
G tormat									
Flas	Tool automatically	formats the FAT	area.				J Valication		
The	ormat begin addre	ss and format le	ngth need not	to be set.					
C Total	omat								
Flash	Tool automatically	formats the total	flash area.						
The	ormat begin addres	ss and format ler ata is erased.	ngth need not	to be set.					
				0%				-	
	NC	P Searching	921600 bos						
		a partiting	1	1.					
1 a llo		in Junioring	1			_		1	
1 In an						1			
ur rechercher	O 討	C in		1				 ∧ ⊕ ⊜ ∎	<i>伝</i> 句》) FRA
ur rechercher	O Ħ	C i		2 0				^ @ @ @	<i>伝</i> (14) FRA
ur rechercher	O H	C in		2 8	11		>	~ @ @ @	仮 (小) FRA
ur rechercher ýž FlashTool Hie Actions	O Ħ	C T		2 8	11		>		(%, d)) FR/
ur rechercher Y] FlashTool Hile Actions [Download] Noo	O Hi Dptions Window Dack Memory Test	e n Help		2 8			,		(虎 d)) FRA
ur rechercher ¥∦ FlashTool Hie Actions [Download] Roos Download Agent	O Et	Help Auth File	Cert File	Concert File	S2 Fornat	Com Download	> Stop		(虎 句)) FRA
r rechercher ↓ FlashTool Hie Actions [Download Agent Download Agent Download Agent	O Eff	Help Auth File	Cert File	RodCet File	Format s_DA.bin Form	Com Download mat	>		(% (J*)) FRA
r rechercher [₩] [™] [™] [™] [™] [™] [™] [™] [™]	O Hi Dptions: Window Dptich: Window Scatter/Config File Wildow/MVD CVUsers/V50V/MVD CVUsers/V50V/MVD	Help Auth File n=Drive/Documents ownloads/1.2d/han	Cert File	RotCet 74 RotCet 74 S2400WTK_attr0	Format B_DA.bin Form S_11C_BB.cfg	Download must	>		<i>伝</i> (19) FRA
ur rechercher F∄ FlashTool File Actions ©oomload Download Agent Download Agent Scatter File Authentication File Certificate File	C Hi Dack Memory Test Scatter/Config File ::\Users\V50W/M\D :\Users\V50W/M\D	Help Auth File nsDrive/Documents ownloads\1.2d\han	Cert File Cert File KFlashTool_v5.11 dheld_test-20210	RodCet File RodCet File 524 00/MTK_AllnOre 1204/UME0X61D_EP	€3 Fornat ≥_DA.bin Forr S_11C_BB.cfg	Download mat	>		Æ (14) FRA
ur rechercher FJ FlashTool File Actions ⊡Download Agent Download Agent Download Agent Scatter File Authentication File Cetticate File Rooter File	C Hi Dack Memory Test Scatter/Config File :-VLsers/V50V/M/D :-VLsers/V50V/M/D	Help Auth File nsDrive/Documents ownloads\1.2d\han	Cert File	RodCet File RodCet File 524 00/MTK_AllnOre 1204/UME0/651D_EP	²² Fornat 2,0A bin Forn 5,11C_88.dg	Courtoed Download mat	>		(k (1)) FRA
ur rechercher ¥J FlashTool Hie Actions Download Agent Download Agent Scatter File Authentication File RoolCet File Name Fill Root.	C Hi Uption: Window Dack Memory Text Scatter/Config File UUsers/V50V/M/D UUSers/V50V/M/D Region addres Region addres	Help Auth File n=Drive/Documents ownloads/1.2d/hane	Cet File Cet File Cet File Cet File Cet File Cet File Cet File	RodCet File RodCet File 524.00MTK_AllnOve 1204.UME0X61D_EP	Egg Fornat 2,0A bin Forr 5,_11C_BB.cfg	Courtoad Download mat	Stop		<u>(r</u> (1)) FRA
rechercher File Attons Download Agent Download Agent Download Agent Scatter File Authentication File RootCert File Norme Stater File Stater	C Eti Dack Memory Test C Scatter/Config File Users/V50V/M/U C Users/V50V/M/U Region addres Ok700060C0 Ok10002800	Help Auth File nsDrive/Documents ownloads/1.2d/hana Begin acdress ox70006000 ox70006000	End address 0x70007C17 0x10002C51	RodCet 7/e RodCet 7/e 624.00/MTK_AllnOre 1204/UME0X61D_CP	23 Fornat 2_DA bin Fornat S_11C_BB.cfg ownhoadsh1.2dhen	Download mat dheld_test-20210204V	Stop Stop Bootslight Bowstoat Dowtloat Dowtloat Dowtloat Dowtloat Strip		Æ (11) FRA
Ur rechercher	C Hi Dack Memory Test Config File Culsers/V50/M/ND Culsers/V50/M/ND Culsers/V50/M/ND Culsers/V50/M/ND Region addres 0x70006000 0x10002000 0x10022000 0x10022004	Help Help Begin acdress Ox70002800 Ox1002800 Ox1002800 Ox1002800 Ox1002800	Cert File Cert Cert Cert Cert Cert Cert Cert Cert Cert Cert Cert Cert Cert Cert Cert Cert	RodCet File RodCet File 624.00MTK_AllnOx6 1204/UME0X61D_CP	₹3 Fornat 2_DA bin Forr 2_DA bin Forr 5_11C_BB.cfg owrloadt1.2dban owrloadt1.2dban	Download mat dheld_test-2021(004V) dheld_test-2021(004V) dheld_test-2021(004V)	Stop Stop Bootshifted Bootshif		辰 (11) FRA
Ur rechercher FJ FlashTool File Actions Download Agent Download Agent Scatter File Authentication File RoolCet File Name Q ARM 5L Q ARM 5L	C Hi Dack Memory Test Config File Culsers/V50/M/ND Culsers/V50/	Help Help Begin acdress Ox70006000 Ox1012D4A0	End address 0x/20007c17 0x/20007c17 0x/20007c17 0x/20007c17 0x/20007c17 0x/20007c17 0x/20007c17 0x/20007c17	RodCet File RodCet File 624.00MTK_AllnOre 1204/UME0X61D_CP Location C:UJsers/VSEVMMD C:UJsers/VSEVMMD C:UJsers/VSEVMMD	53 Fornat 2,0A bin Forr 2,0A bin Forr 5,01C_BB.cfg owrloads11.2dhan owrloads11.2dhan	Download mat dheld_test-2021(0204V) dheld_test-2021(0204V) dheld_test-2021(0204V)	Cop Stop Forvitation Double Do		康 (北) FRA
Ur rechercher FJ FlashTool File Actions Download Agent Download Agent Scater File Authentication File RoolCet File Name ☑ AFM, SL ☑ ArM, SL ☑ PRIMARY, M ☑ YVA	C Hi Dack Memory Test C Scatter/Config File Users/V50V/M/U Users/V50V/M/U Region address 0x70006000 0x1002800 0x1012DAA0	Help Help Auth File nsDrive/Documents ownloads/1.2d/han barroocecoo ox1002800 ox1002800 ox1002800 ox10120AA0	End address 0x70007C17 0x100022647 0x100022647	RodCet 7/e RodCet 7/e 624.00MTK_AllnOre 1204/UME0X61D_CP Location C:UJsers/V5CVMMD C:UJsers/V5CVMMD C:UJsers/V5CVMMD	23 Fornat 2,0A bin Fornat 5,5,11C_BB.cfg owrloadsh1.2dhan owrloadsh1.2dhan	Download mat dheld_test20210204V dheld_test20210204V dheld_test20210204V	Stop Stop Bootslifter Bowstean Dowstean		度 (11) FRA
Ur rechercher ¥J FlashTool Hie Actions [Download Agent Download Agent Scatter File Authenication File RoolCet File Name ♥ ARM BL ♥ ARM BL ♥ ARM BL ♥ PRIMARY M ♥ VVA	C Hi Uption: Window Dack Memory Test Scatter/Config File VUsers/V50V/M/D Users/V50V/M/D Region addres 0x70006000 0x1002800 0x1012DA40	Help Help Begin acdress Ox70002800 Ox10022800 Ox1012DAA0	End address 0x/0007c17 0x1002c407	Cilleer/VSCVMVD	53 Fornat 2,0A bin Forr 2,0A bin Forr 5,01C_BB.cfg owrloads11.2dhan owrloads11.2dhan	Download mat wheld_test-2021(0204V) wheld_test-2021(0204V) wheld_test-2021(0204V)	Cop Stop Doctaining Do		辰 (11) FRA
Ur rechercher FJ FlashTool File Actions Download Agent Download Agent Scater File Authentication File RoolCet File Name ☑ 4RH gBL ☑ 4RH gBL ☑ 9RH Mary M	C Hi Dack Memory Test C Scatter/Config File Users/V50V/M/U Region address 0x70006000 0x1002800 0x1012DAA0	Help Help Begin acdress Ox7000200 Ox1002800 Ox1012DAA0	End address 0x70007C17 0x10002267 0x100022647 0x10022647	RodCert File RodCert File 624.00MTK_AllnOre 1204VUME0X61D_CP Location C:UJsers/V5CVMMD C:UJsers/V5CVMMD C:UJsers/V5CVMMD	23 Fornat 2_DA bin Fornat S_11C_BB.cfg owrloadsh1.2dhan owrloadsh1.2dhan	Download mat dheld_test-2021(0204V) dheld_test-2021(0204V) dheld_test-2021(0204V)	Stop Stop Bootstiffer Bowstoan UMECX810_GPS_110 EXT_BOOTLOADER JOM MYA		度 (11) FRA
Ur rechercher ¥J FlashTool File Actions [Download] Rea Download Agent Scatter File Auftrentication File RoolCet File Name ☑ AFIN_BL ☑ AFIN_BL ☑ PRIMARY_M ☑ VVA	C Eti Control Contro	Help Help Begin acchess 0x7006000 0x1002800 0x1002800 0x101204A0	End address 0x20002407	RoadCett 7/e R	23 Fornat 2,0A bin Four 2,0A bin Four 5,01C_88.cfg owrloads11.2d/han owrloads11.2d/han	Download mat dheld_test20210204V dheld_test20210204V	Stop Stop Bootstington Download UMECX810_95_110 EXT_800TL0ADER NOM NVA		Æ (11) FRA
UI rechercher ¥J FlashTool File Actions [Download] Rea Download Agent Scatter File Authentication File RoolCet File Name ☑ AFM, BL ☑ AFM, BL ☑ PRIMARY, M ☑ VVA < Parameters □ OTP	Control Contr	Help Help Begin acchess 0xr0002800 0x1002800 0x1002800 0x10120AA0	End address 0x20002407	RoatCett 7/e RoatCett 7/e RoatCett 7/e RoatCett 7/e RoatCett 7/e RoatCett 7/e Location C:Users/VSCWMVD C:Users/VSCWMVD C:Users/VSCWMVD	23 Fornat 2,0A bin Four 2,0A bin Four 5,01C_88.cfg owrloads11.2d/han owrloads11.2d/han	Download mat	Stop Stop Double US Bowstoan Dowstoan Dowstoan Dowstoan Dowstoan Stripeortubader NOM MYA		Æ (11) FRA
ur rechercher	Control Contr	Help Help Begin acchess Regin acches	End address 0x20002407 End address 0x2000717 0x100226A7 0x100226A7 0x100226A7	RoatCett File RoatCett File E24 00VMTK_AIIID 0re 1204VUME0X61D_CP Location C:VUsers/VSCVMVD C:VUsers/VSCVMVD C:VUsers/VSCVMVD	23 Fornat 2,0A bin Four 2,0A bin Four 5,01C_88.cfg owrloads11.2dNan owrloads11.2dNan	Download not	Contraction Contracti		Æ (1) FRA
ur rechercher	C Hi Uption: Window Dock Memory Test Scatter/Config File Users/V50V/M/U Region addres 0x7006000 0x1002800 0x1002800 0x1002800 0x1012DA40 Information eJul(0x000000	Help Help Begin acdress Oxn00c800 Ox1002800 Ox1002800 Ox1002800 Ox10120AA0	End address 0.4100425647 0.41026647 0.41026647 0.41026647 0.41026647	RodCet 7/e RodCet 7/e RodCet 7/e RodCet 7/e RodCet 7/e RodCet 7/e Cutors Cuto	i i Fornat 2_DA bin Fornat 5_S_11C_BB.cfg owrloadsh1.2dhan owrloadsh1.2dhan	Download not	Contraction Contracti		Æ (1) FRA
ur rechercher	C Hi Dack Memory Test C Scatter/Coning File Users/V50V/M/\D Users/V50V/M/\D Users/V50V/M/\D D Information eJul(0x000000 0x10*2DAx0 Information eJul(0x000000	Help Help Begin acdress Oxr0002800 Ox1002800 Ox1002800 Ox10120AA0	Cert File Cert Cert File Cert File Cert Cert File Cert Cert File Cert Cert File Cert F		Image: Specific Stress Image: Specific Stress <t< td=""><td>Download Download most wheld_test-2021(02044) wheld_test-2021(02044) wheld_test-2021(02044)</td><td>Contraction Contraction Contracti</td><td></td><td>Æ (1) FRA</td></t<>	Download Download most wheld_test-2021(02044) wheld_test-2021(02044) wheld_test-2021(02044)	Contraction Contracti		Æ (1) FRA

Branchez votre télécommande afin que le formatage de la mémoire puisse commencer. Une fois démarré, ne surtout pas toucher ou débrancher le câble de programmation jusqu'à ce que l'étape se finisse !

	f) histed - O X	Color	fj Rusted - O X
1.1	He Adons Options Window Help [Dowload] Resolbait Nercy Text		He Adons Options Window Help Townford Teordball (Newoy Teol
	tali tali tali tali tali tali tali tali	5 2 10000	tali bali bali bali bali bali bali bali b
	Doveloadstopert Warer/V50x49/DevDexchands/Leht/Red_V51624.00.01%, Alled vs_DV.3m Scatter Fax Warer/V50x49/DevDexchands/L Mitward vid_ see 2022/2014/02/0310, cms_110_38.00g	Accessed	Diselectinger 2019er VKRvHV Overbeert Document (Reht) al., 51502 00 HT, Alled w, DA ber Contex Re Ulier VKRvHV Doverbeett 11 Minerdriel, see 2021/2014/HC201010, cMr, 110, 100 of
	Admittation for Transformer		Aufertaurifie Destaurie
	RouterTe	Line your	Roderle
	New Polymer after Specification Landers Vielding, Science, Science, Science, Vielding, Science, Science, Science,		26 Aug, A. Settings
	6 Januaria Jakandaria Ja		a and a second sec
	0079		
	(6) (raing)		125 (Favor NOR Favor, ACCH[BARD00000; L1N0-6000000] 1
	D Bytes / 8 Bps NOR Searching \$21600 hps 0:00 sec		126200 Bytes / 123,54 KByt HOP COMB \$21600 hpts 0.01 we (H074(3246+1256) (H02332301FH00,69

()	File Actions Options Window Help Download Nesd Dack Memory Test	
🕗 📕 hshitodi-	an a	
accourci	Download Agent 2: Users/V50W/MI:OneDrive/Documents/FlashTool_v51624.00/WTK_AllnOre_DA.bin	
	Scater File 2:Witers/W50/W1A/Downloads/11.2d/handhied_test-20210204/UME0X60D_GPS_110_88.cfg	
	Authentication File	
argements	Cettricate File	
	RoolCert File OK	
MAU	Winning_Ani_Dot Okti00028000 0kti00028000 <	
	Last action was done at 11:50	
	Last action was done at 11:50	
	Last action was done at 1150	
	Last action was done at 11:50 C Parmetirs Information OTP	

Lorsque c'est terminé, débranchez la télécommande puis cliquez sur l'icône « Download ».

	Hie Actions Options Window Help
sh tod -	Download gent Scate/Conig File Auth File Cett File RootCett File Format Download Stop
accourci	Download Agert E-Wsets/\S0WM/UorsDirke/Documents/FlashTod_v5162400/WTK_AllnOre_DA.bin Download (19) Scater File E-Wsets/\S0WM/Downloads/1.2dV/andheld_test-2021020/WLKEX/SID_EFS_11C_B8.clg Downloads/1.2dV/andheld_test-2021020/WLKEX/SID_EFS_11C_B8.clg
hargements Raccourci	Authentication File Cettricate File Bootflow USB UDownload Download
	Name Region address Degrin address Degrin address CK VEX.NM_EL 0x70006000 0x700600000 0x70060000 0x700600000 0x700600000 0x700600000 0x7006000000000000 0x70060
	c
	Parameters Information DTP auJ4(0x0000000), let (0), OTP_WRITE,
	100% (Format NOR IlashADDR(0x00268000) LEN(0x00258000))
	126200 Bytes / 123,24 KBps NOR COM3 921600 bpt 0.02 sec NOR-(32Mb+32Mb) (MXIC) MX25(3291FWI]_09

Rebrancher la télécommande pour que la mise à jour démarre. Encore une fois, ne surtout pas toucher ou débrancher le câble de programmation jusqu'à ce que l'étape se finisse !

	File Actions Options Window Help	
	Download Read Dack Memory Test	
	Download Agent. Scatter/Config File Auth File Cett File RootCett File Format Download Speet	
1	Download Agent D:\Users\\\50\WM\OneDrive\Documents\FlashTool_v51624.00\WTK_AllnOne_DA.bin	
	Scatter File D: Wsers/V50WM/Downloads/1.2d/handheld_test-20210204/UMEDX61D_GPS_11C_BB.cfg	
	Authentication File	
ents	Cetticate File	
9)	RoolCert File	
	Name Regin address End address Location ✓ 4RM_BL 0x70006000 0x700060000 0x700060000 0x700060000	
	< Parameters Information OTP add(0x000000), ler(0), 0TP. \/FILTE,	
	54% (Prc format cocc arcs for bottor dojwrłoad porformance now)	
	0 Bytes / 0 Bps NOR COM3 921600 bps 0:10 sec NOR:(32Mb+32Mb) [MXIC] MX25L3291FWJL09	
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEOX61D GPS 11C N/A	(り) FRA 11:51 (1) FRA 11/02/2021
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEOX61D GPS 11C N/A O H C Image: Comparison of the state o	(11) FRA 11:51 11/02/2021
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEDX61D GPS 11C N/A Image: State of Control of C	(1) FRA 11:51 11/02/2021
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEDX61D GPS 11C N/A Image: State Control of the Control of	(1) FRA 11-51 11/02/2021
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEOX61D GPS 11C N/A Image: State of Control of the state	(1) FRA 11:51 11/02/2021
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEOX61D GPS 11C N/A	(1) FRA 11:51 11/02/2021
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEOX61D GPS 11C N/A Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: State File Image: Sta	(19) FRA 11:51 11/02/2021
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEOX61D GPS 11C N/A Image: Control of the c	(1) FRA 11551 11/02/2021
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEOX61D GPS 11C N/A Image: State of Configuration of the Configuration of th	(1) FRA 11:51 11/02/2021
D Taper ici pour rechercher	MT6261 50000 32Mb SRAW Project: UMEOX61D GPS 11C N/A Image: State File Download Agent 2-Wires/VS0/MU0.nonbodt/1.2d/handhedt_tes/2021024/UMEOX61D_GPS_11C_BR dg Image: State File <	(1) FRA 1151 11/02/2021
D Taper ici pour rechercher	MTi2261 50000 32Mt/s RAM Project: UMEOX61D GPS 11C N/A Image: State (Config File Auth File Cet File RootCet File Format Download Stop Image: State (Config File Auth File Cet File RootCet File Format Download Stop Image: State (Config File Auth File Cet File RootCet File Format Download Stop Download Agert 2:Wters/V50WM/Downloads/1/2d/handheld_tet-20210204/UMEOX61D_GPS_11C_88.cfg Image: State (Config File Auth File Cet File RootCet File Format Download Stop Download Agert 2:Wters/V50WM/Downloads/1/2d/handheld_tet-20210204/UMEOX61D_GPS_11C_88.cfg Image: State File Cet File RootCet File Format Download Stop Name Region addees: Begin acdees: Image: State File Cet File RootCet File Format Download Stop Name Region addees: Begin acdees: Image: State File Cet File RootCet File Format Download Stop Name RootEet File Download Stop Image: State File Cet File RootCet File Format Download Stop Image: State File Cet File RootCet File Format Download Stop Name RootEet File Download Stop Image: State File Cet File RootCet File Format Download Stop Image: State File Format Download Stop Warehuld Let File RootEet File File Image: State File Format Download Stop Image: State File Format Download Stop Image: State File Format Download Stop Warehuld Let File Download Stop	(1) FRA 1151 11/02/2021
D Toper ici pour rechercher	MT6261 50000 32Mt/s RAM Project: UMEOX61D GPS 11C N/A Image: State of the sta	(1) FRA 1151 11/02/2021
D Toper ici pour rechercher	MTi2261 50000 32Mt/s RAM Project: UMEOX61D GPS 11C N/A Image: Control of the state of the	(1) FRA 1151 11/02/2021
D Taper ici pour rechercher	MTE261 5000 32Mt SRAW Project: UMEOX61D GPS 11C N/A	(1) FRA 1151 11/02/2021
D Taper ici pour rechercher	MIE261 5000 32Mb SRAM Project UMEOX61D GPS 11C N/A Image: Construction of the construction of th	(J) FRA 11/02/2021
D Toper ici pour rechercher	MTE261 5000 32Mb SRAM Project UMEOX61D GPS 11C N/A Image: Control of the con	(1) FRA 1151 11/02/2021

Félicitations, votre télécommande est maintenant à jour.

Vous pouvez directement réitérer l'étape 4 si vous en avez plusieurs à mettre à jour, ou revenir à l'étape 3 pour mettre à jour le collier.

<u>ATTENTION</u> : pour effectuer la mise à jour de vos colliers ceux-ci doivent impérativement être éteints.